

INSTALLATION GUIDE

Key Delivery Notes

- As standard Coir Pallets are delivered palletised on a curtain sided articulated vehicle.
- All Coir Pallets should be unloaded and laid out within 24 hours of delivery and kept wet at all times. In hot weather Coir Pallets should be regularly watered.

Measurements

	Size	Weight
Unplanted	2m x 1m	7kg
Pre-established	2m x 1m	20kg
Pre-established	2m x 0.5m	15kg

Delivery and Unloading Instructions

Unloading & Storage

All Coir Pallets should be unloaded and laid out within 24 hours of delivery and kept wet at all times. In hot weather Coir Pallets should be regularly watered.



Ground Preparation and Water Levels

Prepare ground to create a flat and even profile, leaving a surface free from stones and other raised debris. The wetland edge should not be covered by more than 150mm water or up the bank where the soil is dry.



Coir Pallets

INSTALLATION INSTRUCTIONS

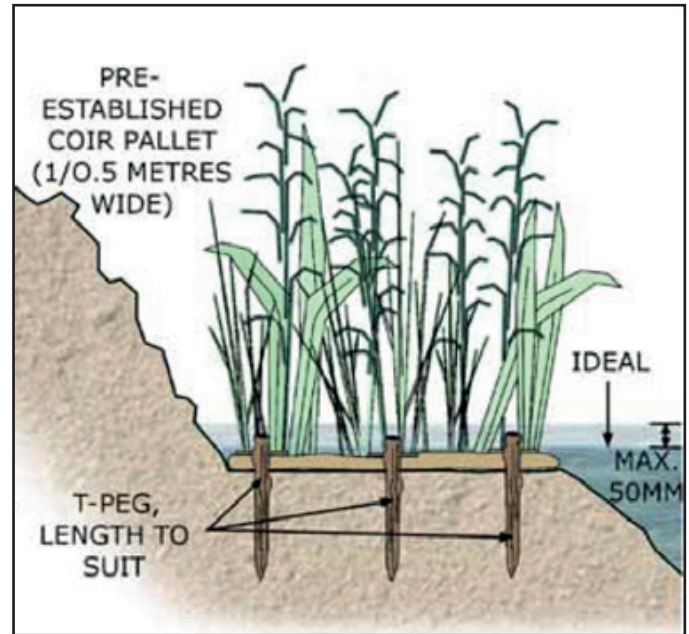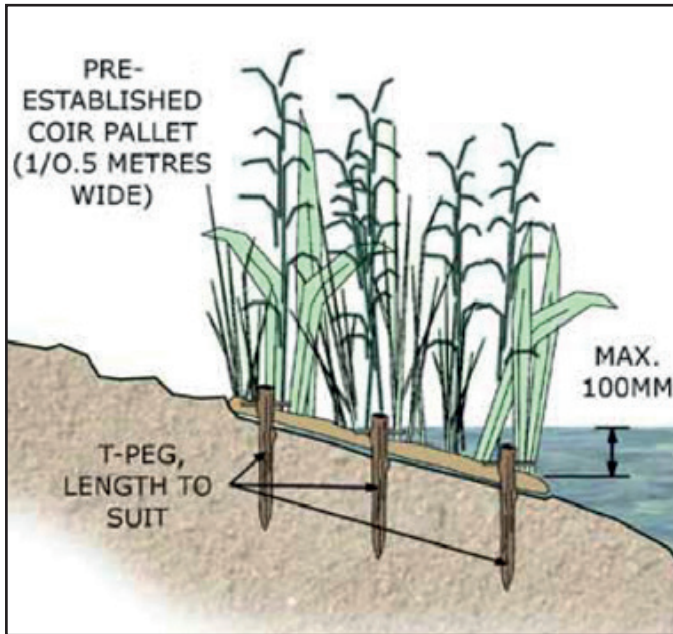

- 1 Place the Coir Pallet on the surface and overlap with the next pallet if required. Typically, still water applications do not require an overlap and applications in flowing water require a 50-100mm overlap.
- 2 Insert fixing pegs (type of fixing as per design). Typically, fixings 3/side (6nr. / 2m long unit) should be used unless the specification states otherwise.
- 3 In high flow environments or in soft ground then attentional fixings, longer fixings or battens may be required.
- 4 Plants to be kept wet and not allowed to dry out.

- 5 Wildfowl/livestock fencing should be considered where there is a risk of grazing or trampling during the initial vegetation establishment period.

Fencing should be appropriately designed to account for any water flow, with mesh aperture that is specific to the type of waterfowl (or livestock) that is being excluded and any other site specific pressures/impacts.

Please note these are generic installation guides, if you have site specific issues please contact us directly.